KOOL- STRIDE "WITH KOOL- FOLD"tm

JOGGING STROLLER FOR CHILDREN
Model No. KS-KF Senior (Steel wheels)
Model No. KS-KFA Senior (Alloy wheel paramount)

OWNER`S MANUAL & SET UP INSTRUCTIONS

Please read & save all instructions contained in this booklet .
Examine all carton contents and wrappings carefully before assembly.

READY, SET...GO!®

Family fun is yours in a snap with your new, snug, sturdy and smooth-riding jogging stroller for children by KOOL-STOP INTERNATIONAL INC. Your Jogging Stroller is loaded with superior comfort and safety features, assembles for action in a few easy steps and folds down into a lightweight, portable package for toting.

Your New KOOL-STRIDE® Jogging Stroller includes these features:

- Folds down, assembles quickly and easily in 1 minute or less.
- Innovative 5-point harness, fully adjustable for toddler and up.
- Unique zip seat (upright or reclining) offers versatile comfort for your child.
- Sunshade that protects your child from heat, rain, UV rays, and an extra large PEEK-A-BOO window built into a multiple position canopy.

* UNMATCHED QUALITY AND UNIQUE DESIGN

THINK SAFE AND BE SAFE!

- Avoid city streets, heavy traffic and dangerous situations.
- Always use the wrist retention strap.
- Never roller-skate while pushing your stroller.
- Never leave your child unattended in the stroller. even when parking brakes are engaged.

KOOL-STRIDE® all terrain strollers are patented and protected by the following U.S. And foreign patent numbers:
D419,133 D382,234 D371,094 D418,780
5,536,033 5,695,212 5,934,754 4,953,880

FURTHER U.S. AND FOREIGN PATENTS PENDING

KOOL-STRIDE® ACCESSORIES

To see the latest accessories available for your jogging stroller, please visit our website at:
Http://www.koolstop.com

SETUP INSTRUCTIONS (Fabric and wheels not shown for clarity)

STEP 1. Remove from carton and set wheels aside.
Lay stroller on a flat surface, as shown in FIG. 1.

STEP 2. From rear of stroller, take hold of the stroller by the handle bar ratchets and pull toward you until frame is extended giving a final quick tug so that locking buttons snap in place, as shown in Fig. 2 & 2-A * BE SURE TO CHECK THAT BUTTONS ARE LOCKED BY CHECKING THE SLIDING HINGE AND STOPPING COLLAR ARE BUTTED TOGETHER AS SHOWN IN FIG. 2-B

STEP 3. Release the handle bar clamps to unfold the handle bar and adjust handle bar to desired position, as shown in FIG. 3, then reclose the clamps.

STEP 4. Now deploy the wrist retention strap from axle tube and connect to Velcro® tab on the handle. This is to keep strap out of the way when running and will break away and stop stroller if needed. Never use stroller without the wrist strap properly secured to your wrist. (see FIG. 3)

FOLDING INSTRUCTIONS (Fabric and wheels not shown for clarity)

*IMPORTANT! -WHEN FOLDING THE STROLLER BE SURE THAT THE SEAT IS ZIPPED IN THE UPRIGHT POSITION BEFORE FOLDING.

STEP 1. To fold, open the cam levers on both sides of the adjustable handle and fold the extended handle all the way underneath and hold firmly against the stationary handle, then reclose the cams. (Shown in fig.2-A)

STEP 2. Depress and hold locking buttons shown in figure 2.-B on both sides and then push foward until stroller is completely flat as shown in FIG.1.

*NOTE; STROLLER MAY BE FOLDED WITH OR WITHOUT WHEELS ATTACHED.

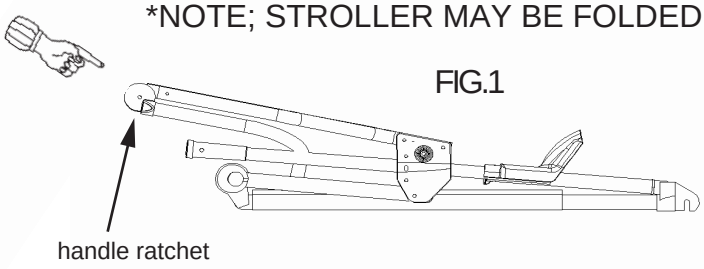

FIG.1

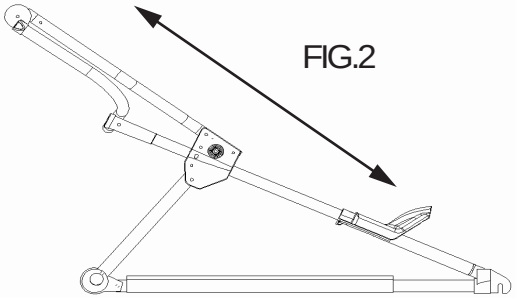

FIG.2

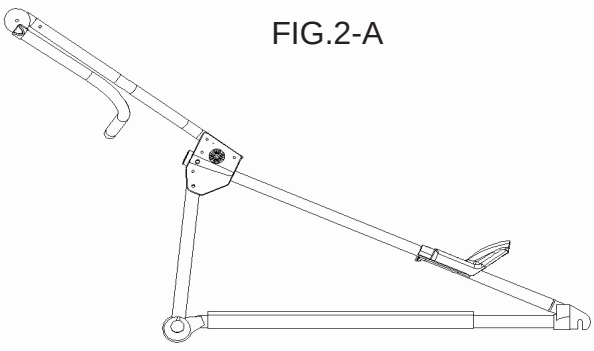

FIG.2-A

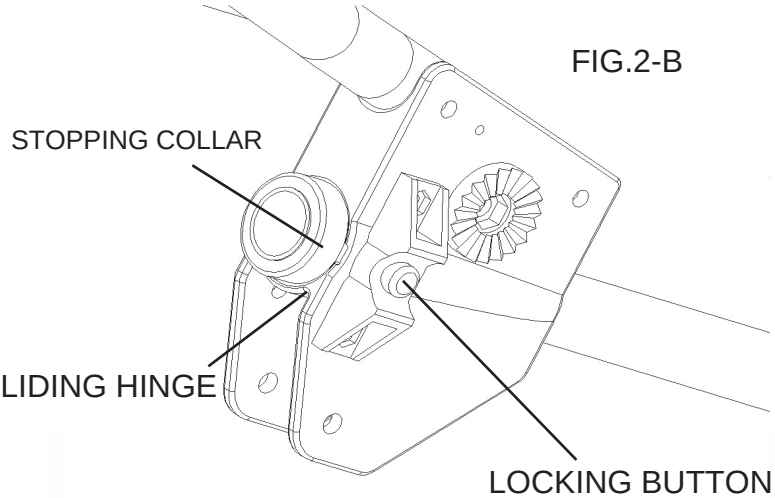

FIG.2-B

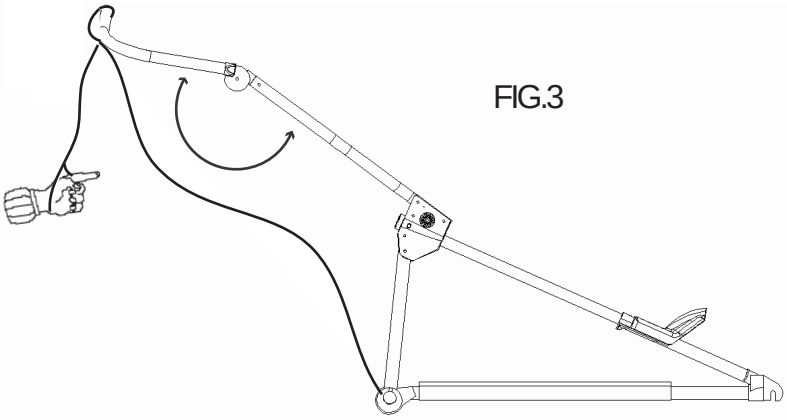

FIG.3

FIG.4

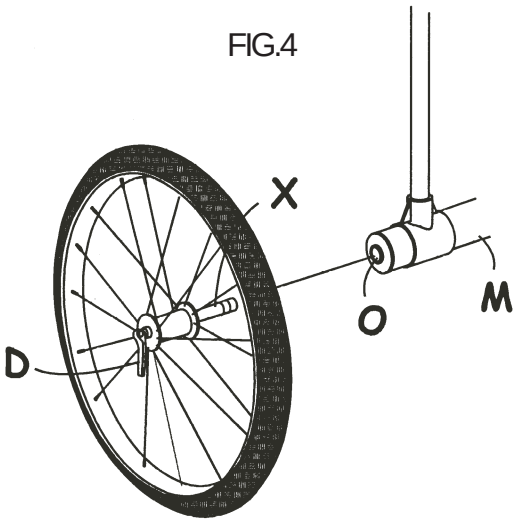

FIG.5

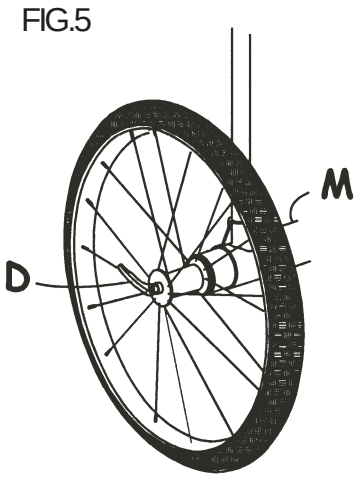

SECURE THE QUICK RELEASE (Q/R) REAR WHEELS FIG.4 & 5

STEP 1. Insert the wheel axle X into the side opening O of the main frame M.

STEP 2. Clamp down the Q/R lever down by moving the lever D 180 degrees to secure the wheel in place. The Q/R lever should face to the rear and parallel to the ground. This will prevent the Q/R lever from snagging a stationary object.

* See page 4 for special instruction on adjusting the rear wheel Q/R tension.

FIG.6

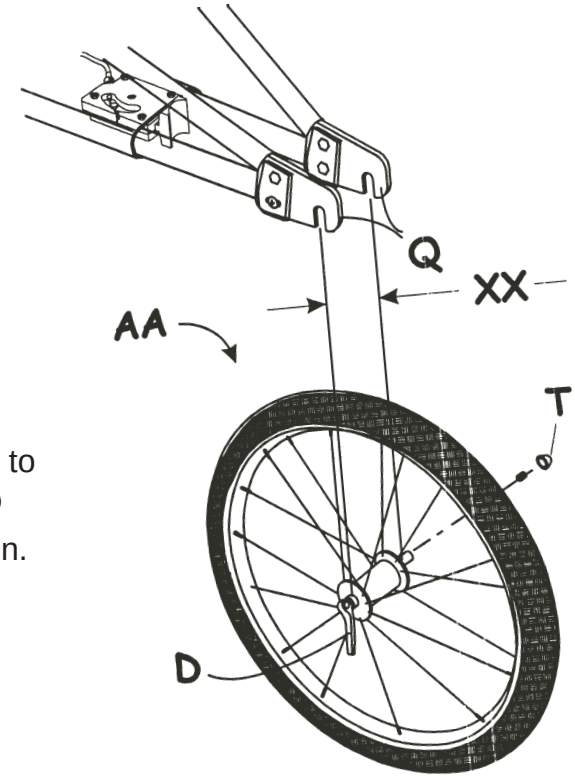

SECURING THE FRONT WHEEL (FIG.6)

STEP 1. Open cam lever D and unscrew knob T until almost off the end of the skewer.

STEP 2. Slide the wheel & axle XX into both fork ends Q .

STEP 3. Clamp down the wheel axle to the fork ends by tightening knob T until snug and then closing cam lever D .(You should feel resistance if correct.) Give a good tug to check that wheel is secure.

ADJUSTING FRONT WHEEL Q/R AXLE

You may need to adjust the clamping tension on the wheel AA to secure it in place. Hold adjusting knob T and turn cam lever D clockwise a turn or so and clamp lever D down to check tension. Repeat if necessary or back tension off by reversing tensioning procedure.

ADJUSTING THE REAR Q/R AXLE

Now and then it is necessary to adjust the axle so that it clamps down correctly. Simply hold the small Nyloc nut L with an 8mm wrench (provided) P or a pair of needle nose pliers and turn the cam lever Q on the opposite end of the skewer until the swedge cap and the shank begin to spread the split ring J. Be sure to have the cam lever Q in the closed position while turning it. (This will be the position it is shown in FIG. 7).

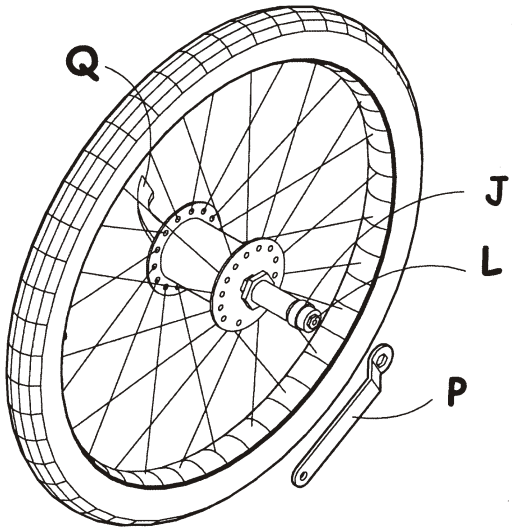

FIG.7

TEST FIT THE WHEEL

1) Insert the wheel axle and wheel assembly into the hole on the axle end with the cam lever open.

2) Close the cam lever (you should feel some resistance) then pull on the wheel with a fair amount of pressure (pull it hard) . If the wheel does not pull out then you have correct adjustment.

3) If the wheel pulls out, even a little, you need to further adjust the tension of the skewer. To do this, remove the wheel and proceed as follows:

1. Hold the Nyloc nut with the pliers or socket wrench P .
2. Turn the cam lever clockwise 1/2 to 1 turn.
3. Retry the "fit of the wheel process" .

FORK TIP ADJUSTMENT (FIG.8 & 9)

The fork tip adjustment is preset from the factory. However, if you notice the front wheel is not tracking correctly, you may need to adjust the front wheel for correct alignment. To adjust the front wheel alignment in linear position, loosen the screw (S) on the fork tip (K), and manually move the wheel to the desired position. You may need to roll the stroller back and forth to test the new setting. Tighten the adjustment screws when wheel is aligned.

NOTE:
To achieve proper wheel alignment, you may need to test roll the stroller several times.

FIG.8

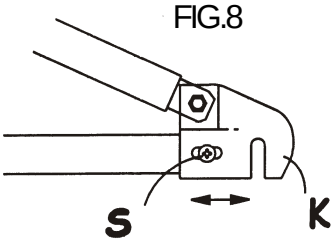

FIG.9
(Top view)

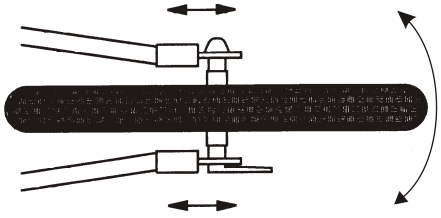

CANOPY POSITIONIG (FIG. 10 & 11)

STEP 1. Your "KOOL-FOLD KOOL-STRIDE"® comes with the canopy pre-attached. However if you so desire you can adjust the position by simply chosing one of the two Velcro® straps as shown in FIG 10. Then re-thread the strap through the D-RING on the handle as shown in FIG 11. This will position the canopy in either a full out or slightly retracted position to achieve desired shade coverage.

STEP 2. Extend wire frame at the front edge of the canopy until canopy is taught.

NOTE: CANOPY MAY ALSO BE COMPLETELY RETRACTED BY ROTATING WIRE FRAME BACK AGAINST THE HANDLE BAR.

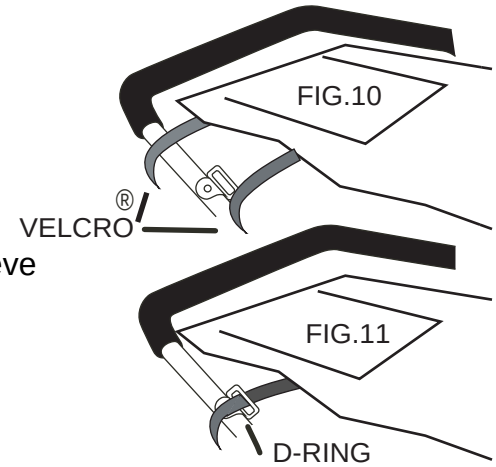

ALWAYS USE THE KOOL-STRIDE® 5 POINT SEAT HARNESS (FIG. 12&12-B)

STEP 1. Disconnect all straps from the main buckle and place straps to the sides as shown in FIG.12.

STEP 2. Then place child in comfortable position in seat(seat may be in reclined or upright position).

STEP 3. Once child is positioned properly, re-secure straps and buckles as shown in FIG. 12-B.

NOTE: The height that the shoulder straps are secured to the seat is adjustable for children of various size. To adjust, remove straps from 1st/2nd/or 3rd position on height adj. straps shown in FIG.12 for desired height.

FIG.12

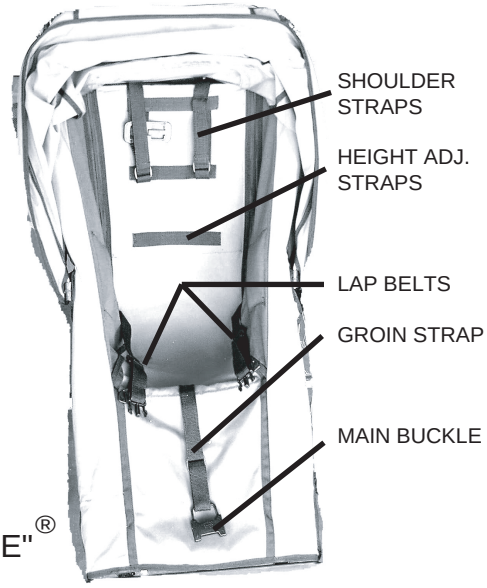

SPECIAL FEATURE SEAT MAY BE RECLINED OR POSITIONED UPRIGHT BY ZIPPING UP OR DOWN THE ZIPPERS ON THE SIDES OF THE CHILD, THIS IS EXCLUSIVE TO "KOOL-STRIDE"®

PARKING BRAKE (FIG 13 & 14)

The " P- brake "AA comes from the Factory Pre-adjusted. In period of time after many brakes, the brake cable will stretch a little. To re-adjust the brake, turn the knurled adjusting barrel BR counter clockwise and loosen the cable anchor bolt BT. Adjust the cable by pulling the cable Wire W and fasten the anchoring bolt BT. Tighten the adjusting barrel BR as well.

FIG.13

FIG. 12-B

FIG.14

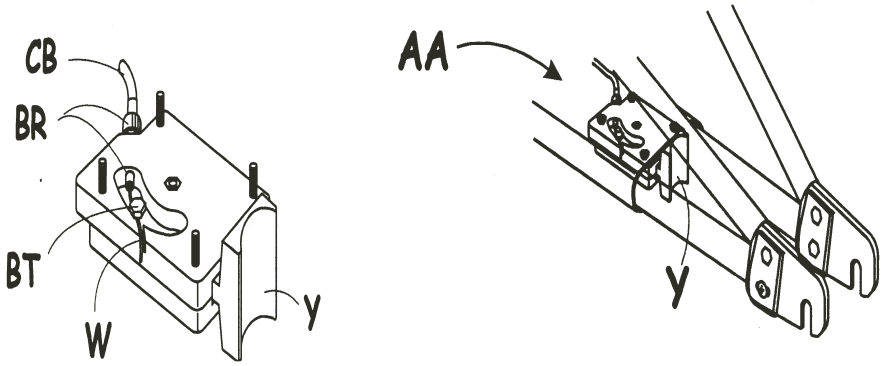

PARKING BRAKE OPERATION (FIG. 15 & 16)

Your KOOL-STRIDE® is equipped with two parking brakes. The brake lever on the handle can be used manually to slow the stroller down while jogging. The brake lever on the handle is also equipped with a locking mechanism that acts as a parking brake. To lock the brake in the parking position, as shown in FIG. 16, hold the brake handle down to apply the brake. Hold the locking button HH down while releasing the handle. To release the parking brake. Depress the brake handle, and the locking button will release itself.

FIG.15

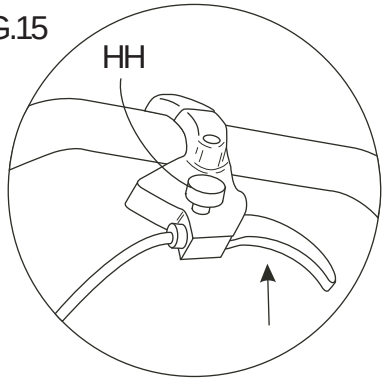

FIG.16

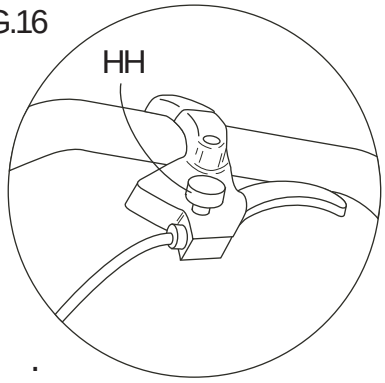

NOTE: PROPER TIRE INFLATION IS NEEDED FOR PROPER "P" BRAKE OPERATION (30-60 PSI.)

CAUTION:

NEVER LEAVE YOUR CHILD UNATTENDED IN THE STROLLER EVEN WHEN PARKING BRAKES ARE ENGAGED .

ALWAYS USE THE REAR WHEEL RETENTION STRAP .

SECONDARY PARKING BRAKE

A secondary parking brake is strap JJ located on the side of the stroller to prevent the wheel from rolling.

Thread strap JJ through the spokes and wrap it around the wheel.

Secure clip KK as shown in FIG. 17

FIG.17

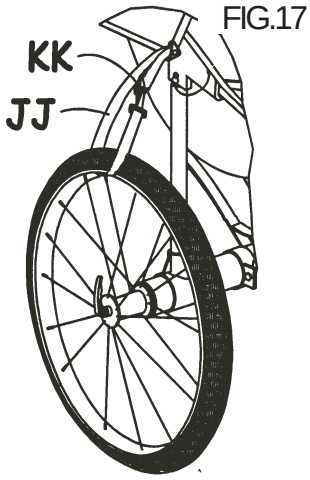

WARNING!

Always clip strap JJ around upright tube C , as shown in Figure 18 when not in use. The strap can get tangled in the spokes and may damage the wheel.

While both parking brake systems are made of quality materials and will hold the KOOL-STRIDE® steady in the parked position, you should always exercise caution when putting a child in the stroller. Don't attempt to put a child in the stroller (or expect the stroller to hold) on a hill.

FIG.18

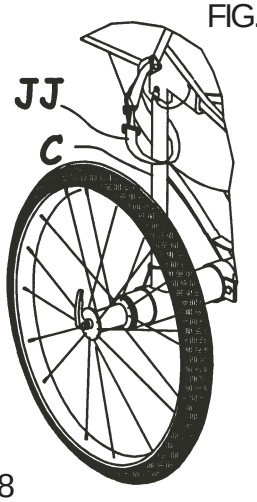

FIG.18

STORAGE AND TOTING INSTRUCTUONS

*Leave seat in place, in upright position
*Reverse procedures described on pages 2, 3 & 4.
*Nest rear wheels so that the axles face each other.
*Keep sharp objects away from fabric.
*FOR BEST STROLLER PROTECTION AND STORAGE, IT IS RECOMMENDED TO USE THE TRAVEL-CARRY BAG AVAILABLE FROM YOUR RETAILER OR KOOL-STOP.®

PARTS LIST			
NO.	PART NO.	DESCRIPTION	QTY.
1	J1-1010	FRONT WHEEL ASSEMBLY	1
2	J1-1020	REAR WHEEL ASSEMBLY	2
3	J1-1050	AXLE TUBE	1
4	KF-1051	HANDLE BAR TUBE(LOWER)	2
5	KF-1052	TOP TUBES	2
6	J1-1053	BOTTOM EXTRUSION	2
7	KF-1054	UPRIGHT TUBES	2
9	J1-1060	AXLE ENDS	2
10	KF-1061	AXLE TO UPRIGHT CONNECTOR	2
11	J1-1062	AXLE TO BOTTOM TUBE CONNECTOR	2
12	J1-1063	STRAIGHT EYE ENDS	2
13	J1-1016	FRONT WHEEL SKEWER	1
14	KF-1000	HANDLE RACHET ASSEMBLY	2
15	J1-1066L	FORK TIP, LEFT	1
16	J1-1066R	FORK TIP, RIGHT	1
17	KF-1067	HINGES	2
18	KF-1068	FOOT PLATE	1
19	J1-1070*	CANOPY RATCHET	2
20	J1-1071*	RATCHET SPRING	2
21	KF-1080	SEAT	1
22	KF-1082	MULTI POSITION CANOPY	1
23	J1-1085*	FOAM GRIP SHORT	1
24	J1-1081	LEASH / WRIST STRAP	1

PARTS LIST			
NO.	PART NO.	DESCRIPTION	QTY.
25	J1-1086	FOAM GRIP, LONG	1
26	J1-1088*	HANDLE BAR END PLUG*	2
27	J1-1090	CANOPY FRAME, WIRE	1
28	J1-1100	BRAKE LEVER ASSEMBLY	1
29	J1-1101	BRAKE CABLE	1
30	J1-1102	BRAKE CALIPER ASSEMBLY	1
31	J1-1209*	BOLT, M6X60MM, PAN HEAD,	2
32	J1-1210*	BOLT, M6X38MM, PAN HEAD,	2
33	J1-1211*	BOLT, 1/4-20X27MM, W/10MM	4
34	J1-1212*	BOLT, 1/4-20X27MM, W/10MM	2
35	J1-1215*	NUT, M6 NYLOCK,	4
36	J1-1216 *	NUT, 1/4-20 NYLOCK, 7/16" HEX	4
37	J1-1217*	NUT, M5 NYLOCK, BLACK	2
38	J1-1219*	FLAT WASHER, 6MMX16MM, UCP	2
39	5LT32	FIVE POINT BUCKLE	1
40	J1-1055QR	QUICK RELEASE AXLE	2
42	KS-MWB	BASKET	2
43	KF-1240	SHOULDER STRAP CLIP	1
41	KF-1052	FRONT TOP TUBE	2
44	KF-1051B	HANDLE BAR ADJ. TOP TUBE	1
45	J1-1087*	PARKING BRAKE STRAP	1

*ITEMS NOT ILLUSTRATED.

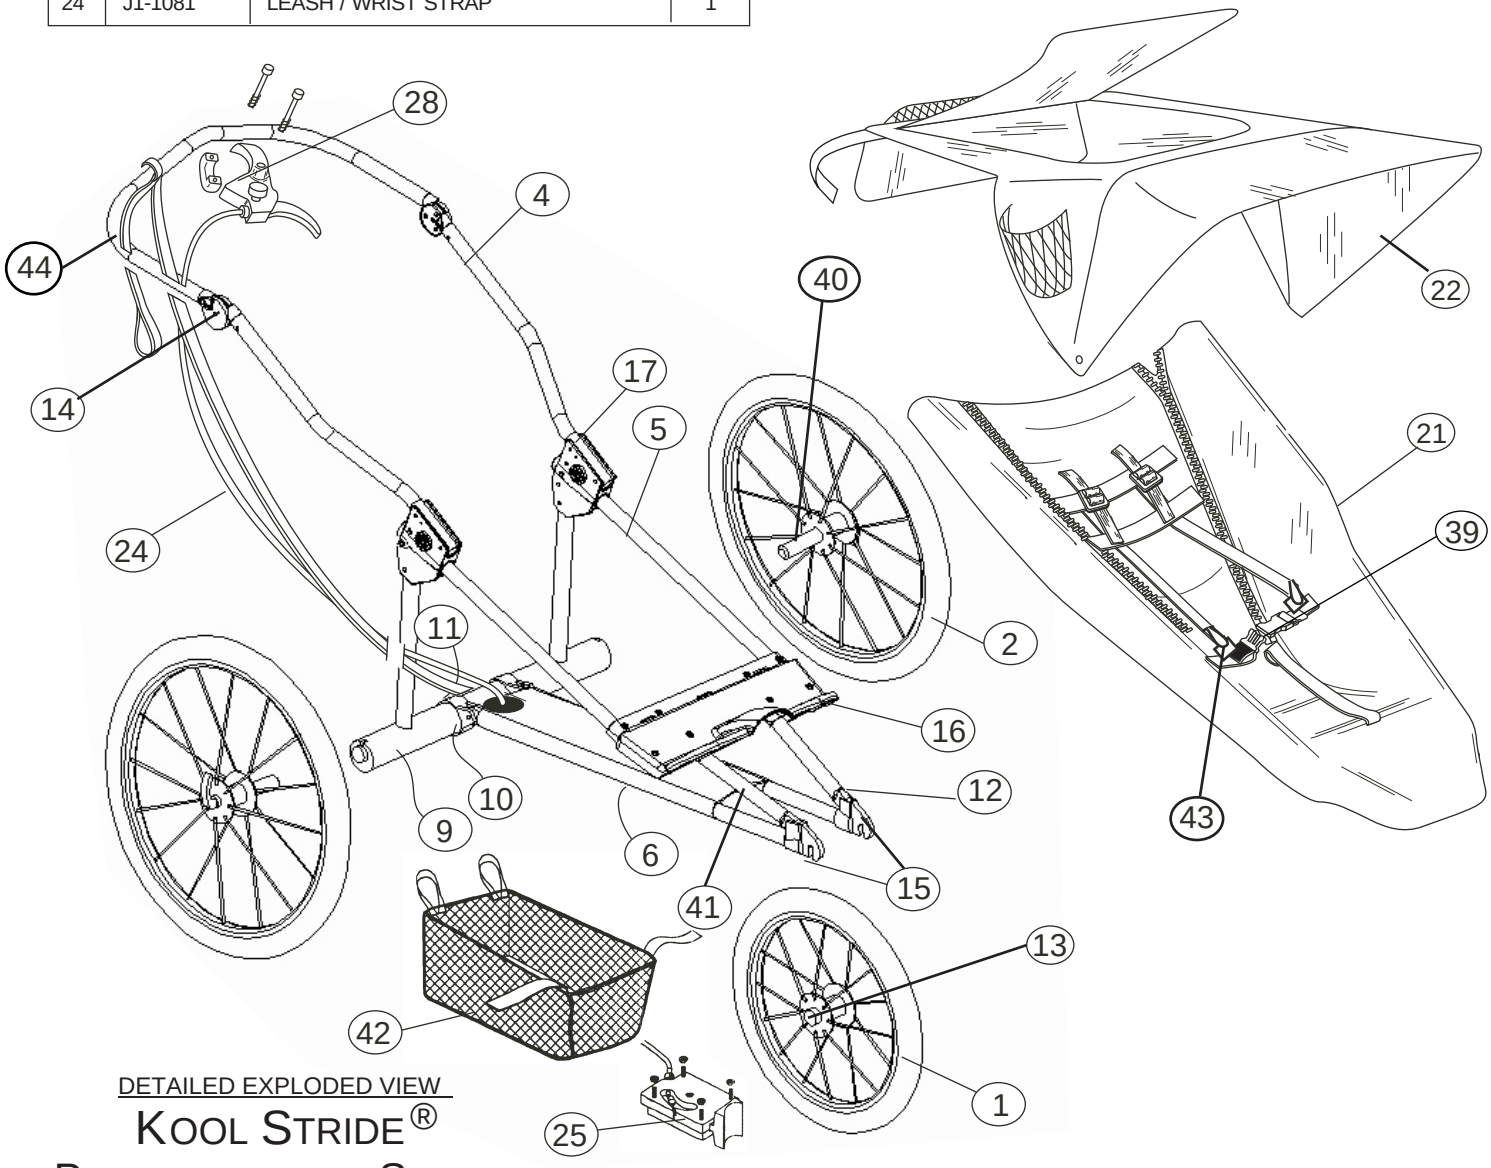

DETAILED EXPLODED VIEW

KOOL STRIDE®

PARAMOUNT AND SENIOR

WARNING!

DO NOT USE THIS STROLLER UNDER DARK CONDITIONS. THERE ARE NO REFLECTORS OR LIGHTS INSTALLED TO ENABLE YOU TO SEE HAZARDS, OR OTHERS TO SEE THE STROLLER.

(MAXIMUM WEIGHT LIMIT IS 85 LBS.) Never hang items from the handle, it can cause the stroller to tip backwards and injure the passenger!

IMPORTANT... Although a helmet for the passenger is not required, it is a good idea to put a helmet on the passenger when jogging with a stroller.

KOOL-STRIDE® ACCESSORIES

KF-PAD	SEAT PAD FOR EXTRA COMFORT AVAILABLE IN SEVERAL COLORS	$23.00 MSRP*
KS-RC	WIND/RAIN SHIELD WITH CLEAR PVC WINDOW AND FABRIC----------	$25.00 MSRP*
KS-MWB	MESH WEDGE BAG (BLACK)----------	$19.00 MSRP*
KS-DWB	DELUXE WEDGE BAG WITH SHOULDER STRAPS (BLACK)----------	$40.00 MSRP*
KS-TCB	DELUXE TRAVEL AND CARRY BAG (BLACK)----------	$87.00 MSRP*
KS-BUG	SHADE AND BUG SCREEN COVER (BLACK)----------	$87.00 MSRP*

* MANUFACTURER`S SUGGESTED RETAIL PRICES SUBJECT TO CHANGE WITHOUT NOTICE.

KOOL-STRIDE® 10 YEAR LIMITED WARRANTY

KOOL STOP INTERNATIONAL, INC. warrants this product to be free of defects in workmanship and material for 10 years (with the exception of all fabric components, which shall be warranted for a period of five years). Under normal use and service following date of purchase and delivery to the original customer. the warranty does not cover wheels and tires.

This warranty will not apply to damages arising from neglect, accidental or intentional damage, institutional or commercial use, or misuse of the product.

Repairs or replacement under this warranty shall be made by KOOL STOP INTERNATIONAL, INC. or through an authorized KOOL STOP INTERNATIONAL, INC. dealer without charge to the customer.

If the dealer or factory representative finds return necessary, packing and shipping cost to the factory will be prepaid by the customer. KOOL STOP INTERNATIONAL, INC. will, at its sole option, repair or replace the product and ship it (or one of equivalent type and quality if exact replacement is unavailable) to the dealer authorizing the return.

Expressly excluded by this warranty is liability for consequential property or commercial damages. THIS IS A LIMITED WARRANTY.

Information in this manual is subject to change without notice. CHECK FOR UPDATES AT: "WWW. KOOLSTOP.COM"

©2002 KOOL-STOP INTERNATIONAL, INC. All rights reserved. No part of this OWNER'S MANUAL AND ASSEMBLY INSTRUCTIONS publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any languages in any form, by any means, without written permission by KOOL STOP INTERNATIONAL, INC.

Designed and Imported By:
KOOL-STOP INTERNATIONAL, INC.
17150 S. W. Boones Ferry Rd.
Lake Oswego, OR. 97035

Sales Office:
KOOL-STOP INTERNATIONAL, INC.
1061 South Cypress St.
La Habra, CA. 90631
(800) 586-3332
Fax: (714) 992-6191

WWW.KOOLSTOP.COM
E-MAIL: KSICALIFORNIA@AOL.COM

THINK SAFE AND BE SAFE!

Visit the JPMA Website at www.jpma.org
for the latest and most up-to-date information

MAINTENANCE AND CLEANING SPECIFICATIONS FOR KOOL-STOP® STROLLERS

CLEANING (ENTIRE STROLLER)

For general cleaning you may simply wash your stroller as you would an automobile. For instance, scrubbing down the entire stroller with a scrub brush and non bleach dish soap & water would be sufficient to clean normal sediments, dust and dirt, etc. Then rinse with fresh water (tap water from garden hose).
Wipe down frame parts and excess water from fabric with a clean towel then allow to dry out of direct sunlight. This cleaning procedure should only be performed out side at temperatures at or above 60 degrees Fahrenheit in order for proper drying to occur.

AFTER CLEANING ALWAYS PERFORM LUBRICATION PROCEDURES LISTED UNDER: ***"LUBRICATION&PREVENTATIVE MAINTENANCE"SECTION***

CLEANING (FABRIC REMOVED)

Remove canopy by extracting both canopy ratchet screws located on the sides of the stroller on the sliding hinge portion of the stroller(see fig.2-b page 4) or locate on the exploded view on parts list page. Be sure to note the order in which the hardware is assembled and always place removed hardware in a container or plastic bag as not to lose any parts.There is a nut recessed in the back side of the hinge that the ratchet screw threads into, be sure to remove these as well when you remove the ratchet screws.

Now undo the Velcro® at the back of the canopy and remove the canopy. Remove metal wires from canopy and set canopy aside.

Remove all screws on seat fabric that hold any part of the fabric to the frame as well as all Velcro® straps.(once again, don`t forget to note the locations and order in which they belong and keep together in a container). Once this has been performed the seat and canopy should be free of the frame.

Fabric may now be machine washed in cold water with non- bleach detergent on any cycle and then hang dried.
Resort back to procedures for cleaning entire stroller to clean remaining frame work and wheels

NEVER CLEAN STROLLER WITHOUT PERFORMING LUBRICATION PROCEDURES TO BE LISTED ON FOLLOWING PAGE.(10)

MAINTENANCE AND CLEANING CONTINUED

LUBRICATION & PREVENTATIVE MAINTENANCE

Every 60 days or immediately after cleaning, the stroller should be lubricated as follows:

With a light film greaseless lubricant, spray all metal surfaces of the wheels and allow to sit for a few minutes.(We recommend using LPS 1 You can find this lubricant at your local hardware & automotive stores.)
After letting the wheels sit, wipe clean with a cloth. This will leave a thin film as a protective layer on the metal parts of the wheels. This will also give a nice glow to the rims.

All other parts on the stroller are made of either aluminum or stainless steel and do not require lubrication.

NOTE: EVEN STROLLERS WITH THE ALLOY WHEELS SHOULD BE MAINTAINED IN THIS MANNER.(ALLOY WON`T RUST BUT IT WILL OXIDIZE.)

TIRE PRESSURES

Tire pressures should be checked periodically because they may change in time and with changes in the weather. Performance and ride are also effected by tire pressure.(see chart)

RECOMMENDED PRESSURES

FRONT 20 - 40 PSI ***REAR*** 40 - 65 PSI

ADJUST FOR PREFERRED RIDE

ALWAYS CHECK FOR ACTUAL MAXIMUM TIRE PRESSURE MARKED ON TIRE SIDEWALL

AXLE ADJUSTMENT

While doing maintenance you should check the axle tension. Refer to page 4. for tensioning procedures.

IF YOU HAVE PUSH BUTTON AXLES THEN NO ADJUSTMENT IS NEEDED

(REFER TO FEATURES LISTED ON FRONT COVER IF YOU DON`T KNOW WHICH ONE YOU HAVE)